

Use with push buttons



Cold water. Please keep the button pressed. The device dispenses purified, chilled water. When you release the push button the dispensing stops. When start dispensing and the end of the dispensing process you hear beep sound.




Sparkling water. Please keep the button pressed. The device dispenses purified, chilled, carbonated water. When you release the push button the dispensing stops. When start dispensing and the end of the dispensing process you hear beep sound.



Safety lock. Hot water can only be dispensed after unlock the hot water button. First press the safety lock button. You will then hear a double beep. You can then dispense hot water by pressing the hot water button.



Hot water. After unlock, please keep the hot water button pressed. The device dispenses purified water at a temperature of 85 °C. When you release the push button the dispensing stops. When start dispensing and the end of the dispensing process you hear beep sound.

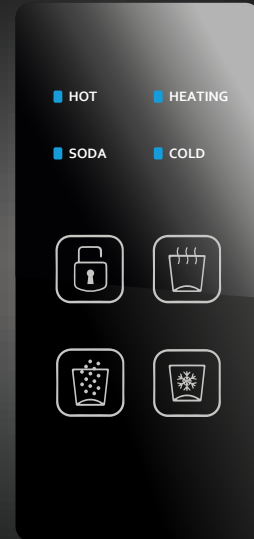

Non-contact use

The device detects the back of your hand within 10 cm. All functions are only available after the safety lock is released.



Security lock. To dispense all three products, the safety lock must first be released. You must move your hand close to the padlock icon on the front of the sensor. The device will beep twice and a green light will indicate that the product is ready to dispense.



Cold water. After releasing the safety lock, please, hold the back of your hand on the right side of the sensor. The device will dispense purified, chilled water. If you take your hand away from the sensor the dispensing stops. When start dispensing and the end of the dispensing process you hear beep sound.



Sparkling water. After releasing the safety lock, please, hold the back of your hand on the left side of the sensor. The device will dispense purified, chilled, carbonated water. If you take your hand away from the sensor the dispensing stops. When start dispensing and the end of the dispensing process you hear beep sound.



Hot water. After releasing the safety lock, please, hold the back of your hand on the top side of the sensor. The device will dispense purified water at the temperature of 85 C. If you take your hand away from the sensor the dispensing stops. When start dispensing and the end of the dispensing process you hear beep sound.